 







BASE CABINET ASSEMBLY INSTRUCTION

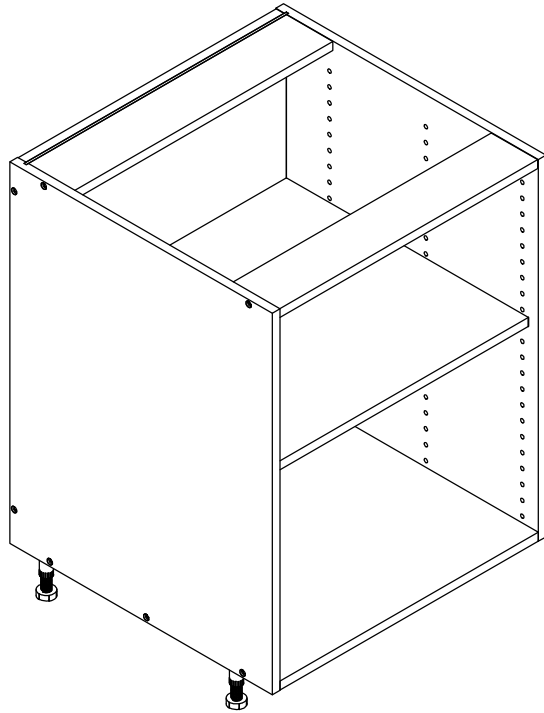



Item No.

UB09	
UB12	UVB12
UB15	UVB15
UB18	UVB18
UB21	UVB21
UB24	UVB24
UB27	UVB27
UB30	UVB30
UB33	UVB33
UB36	UVB36
UB42	


Hardware Fitting

1	Screw	 $\varnothing 7 * 50 \text{mm} (2 \frac{1}{4} \text{inch})$	4PC
2	Shelf Support		4PC
3	Leg	 4 $\frac{1}{2}$ "	4PC
4	Screw for Leg	 $\varnothing 4 * 15 \text{mm} (\frac{5}{8} \text{inch})$	20PC
5	Screw for Drawer Front	 $\varnothing 4 * 31 \text{mm} (1 \frac{1}{4} \text{inch})$	16/24PC


A	Left Side Panel	1PC
B	Right Side Panel	1PC
C	Bottom Panel	1PC
D	Back Panel	1PC
E	Support Rail	4PCS
F	Adjustable Shelf	1PC

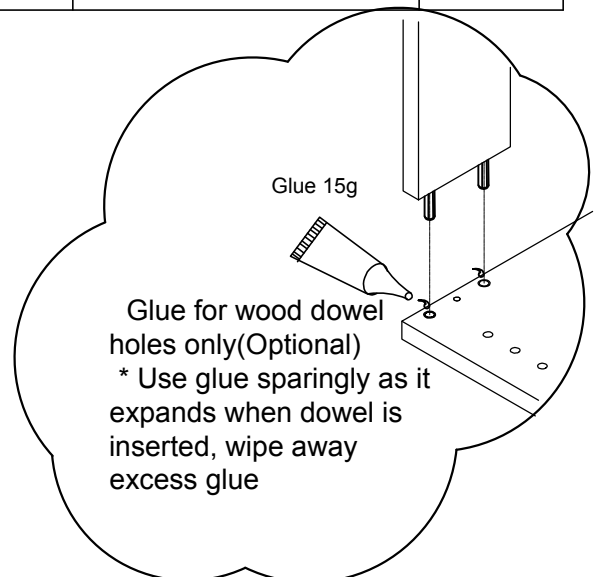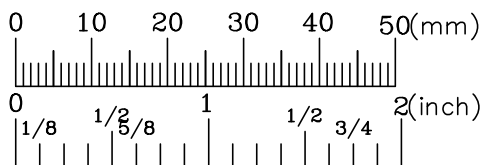  

 
Step1

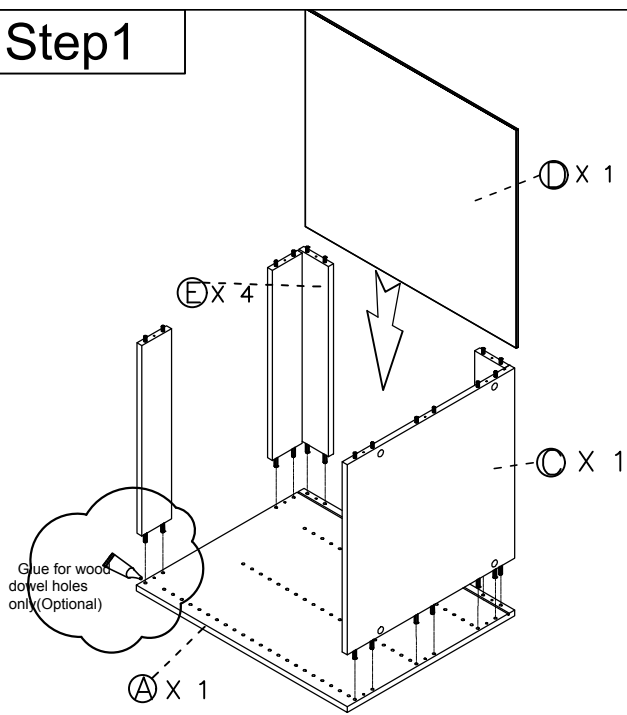

 
Step2

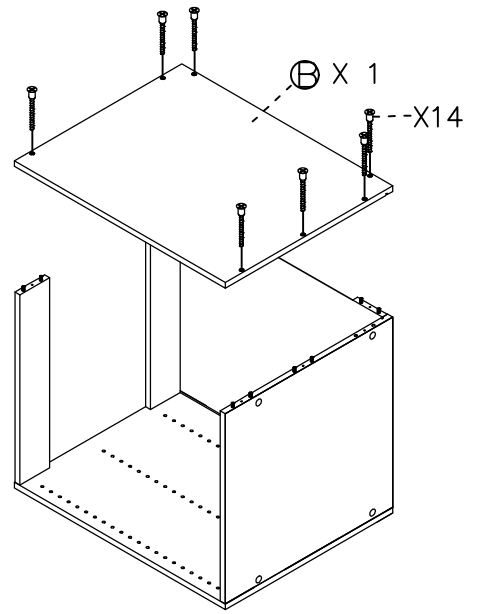

 
Step3

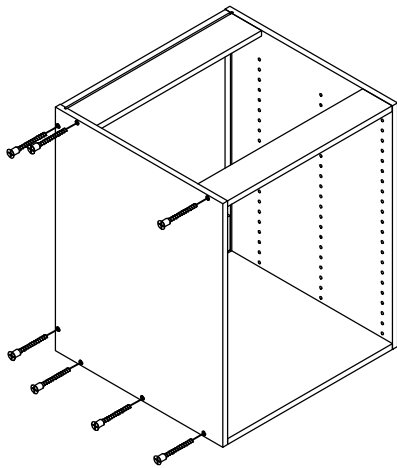

 
Step4

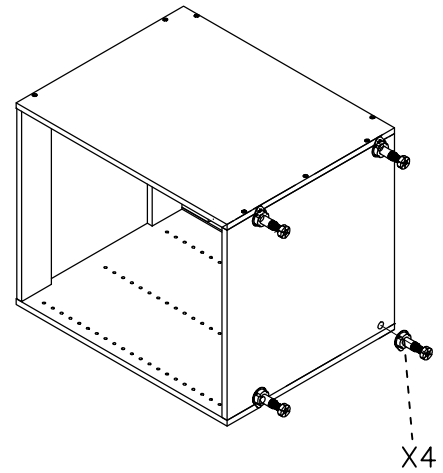

 
Step5

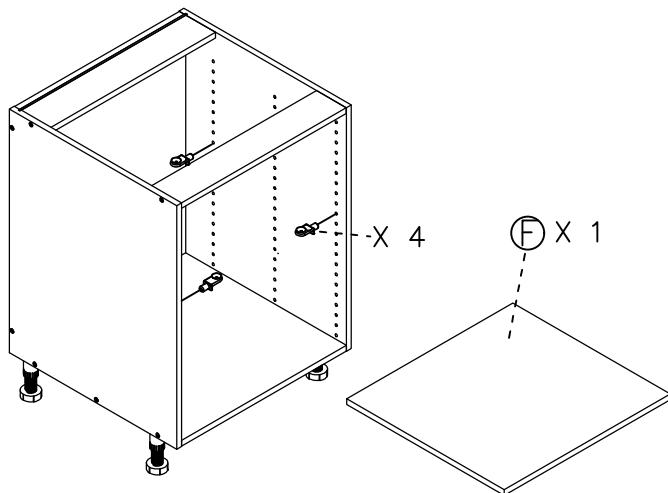

 
Step6

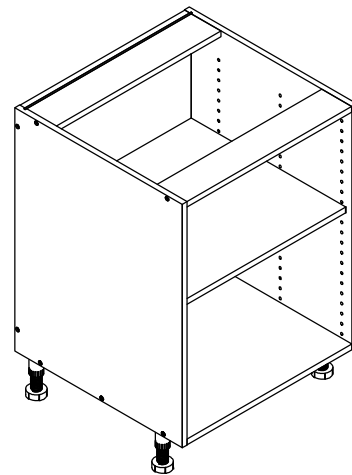

 
a. Full door cabinet

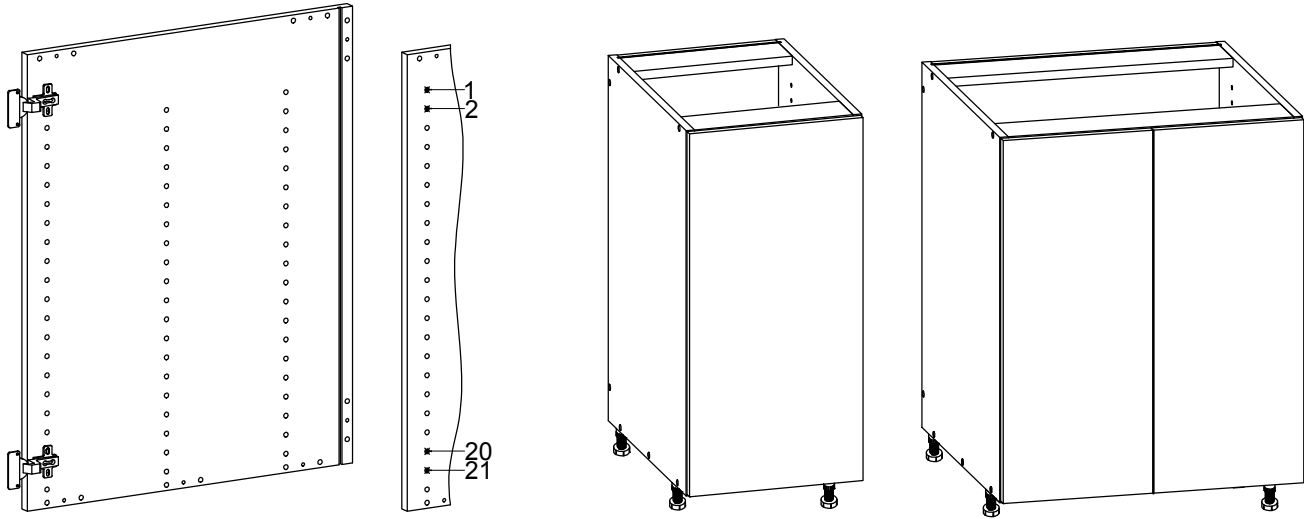



 
b. Door and drawer cabinet

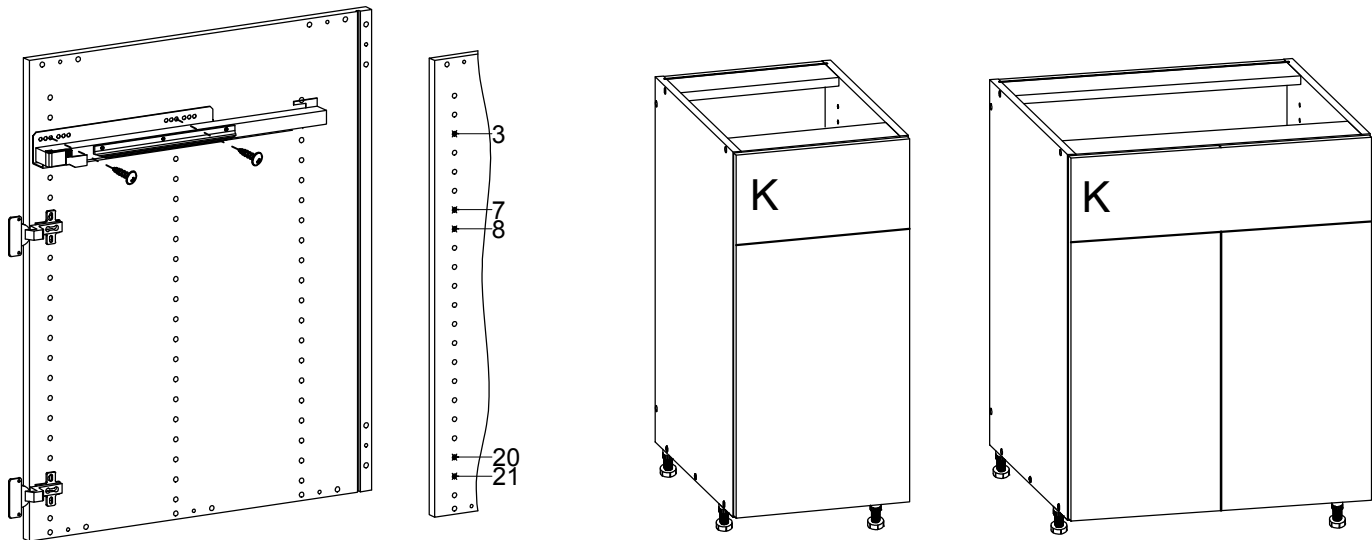



 
c. 2 drawers

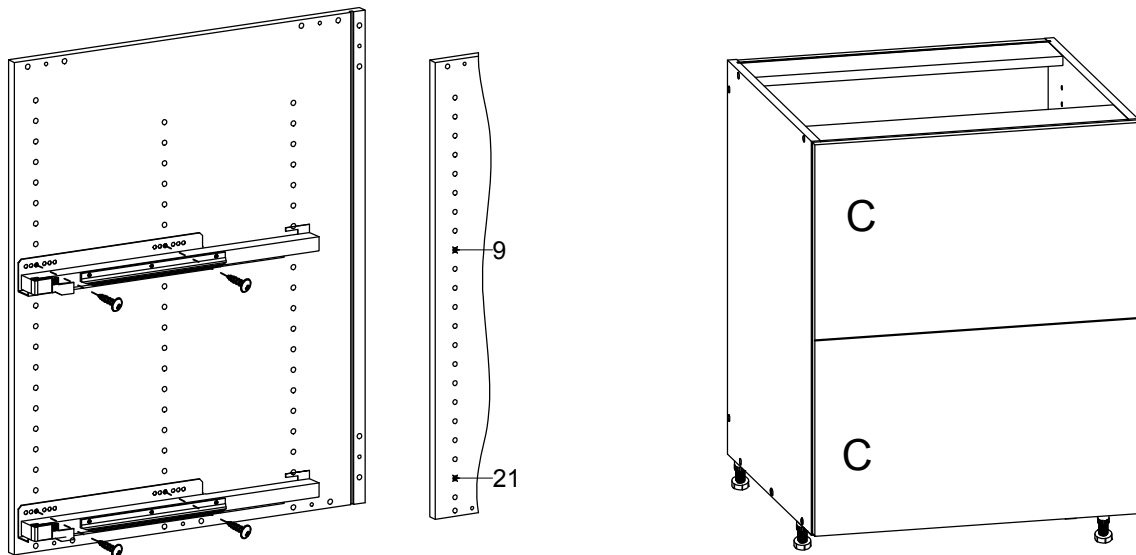

   
d. 2 drawers / 1 inner drawer

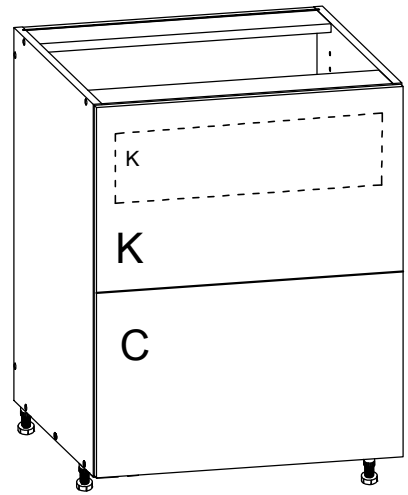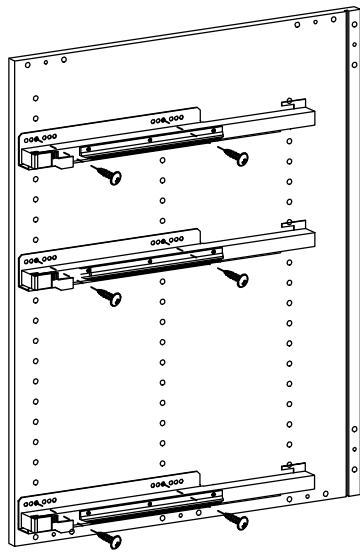

   
e. 2 drawers / 2 inner drawers

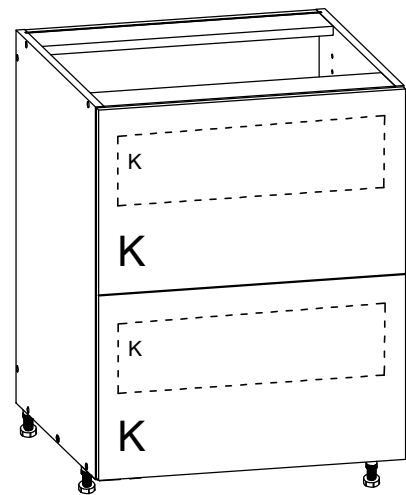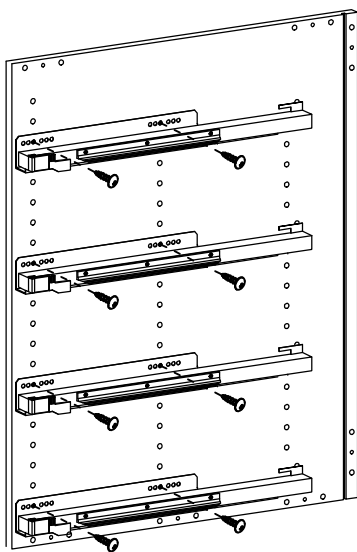

 f. 3 drawers




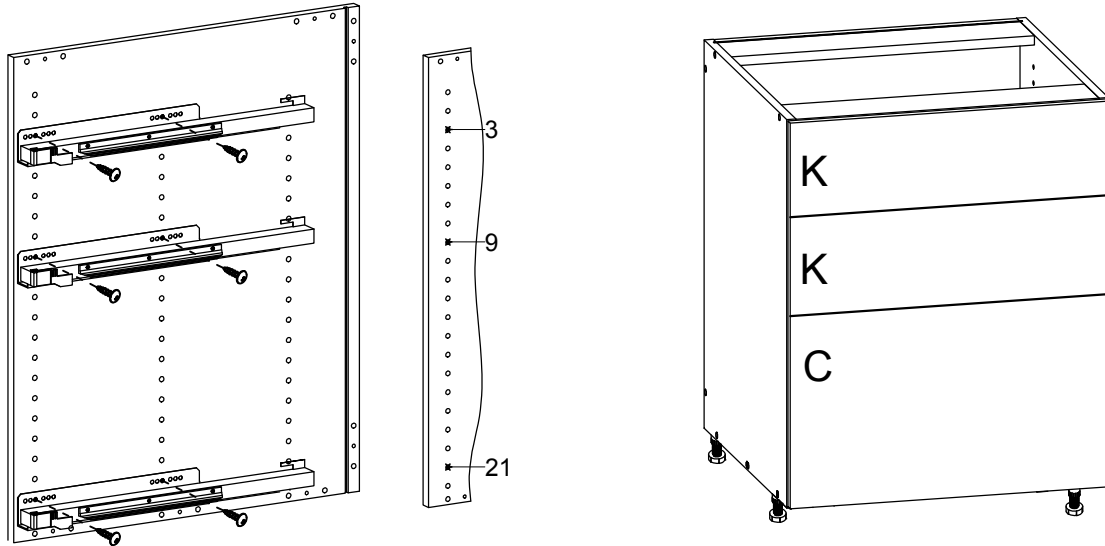


 g. 4 drawers

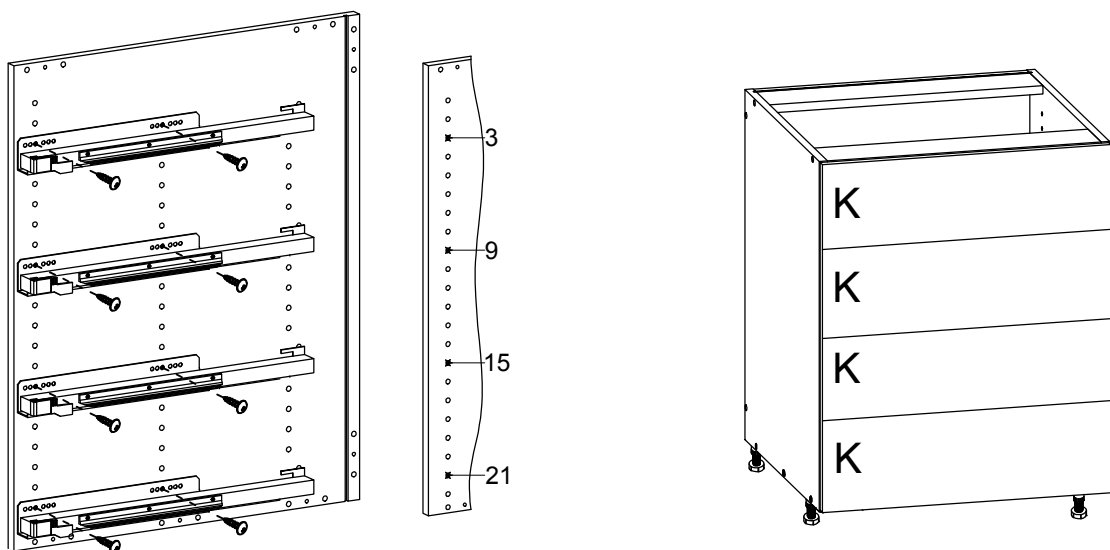


Base Blind Cabinet	Pull Distance	Cabinet	Panel	Door
BLB 37 /40	37"-40"	UB30	BL1830	D1230
BLB 40 /43	40"-43"	UB33	BL1830	D1530
BLB 43 /46	43"-46"	UB36	BL1830	D1830
BLB 46 /49	46"-49"	UB36	BL1830	D2130
BLB 49 /52	49"-52"	UB42	BL1830	D2430

    Blind Base Cabinet

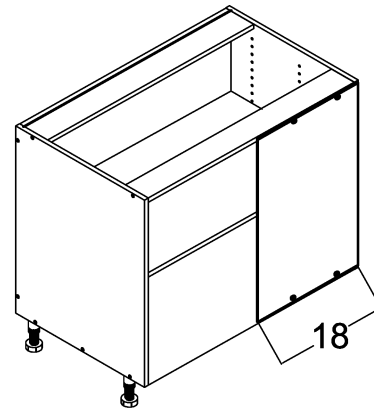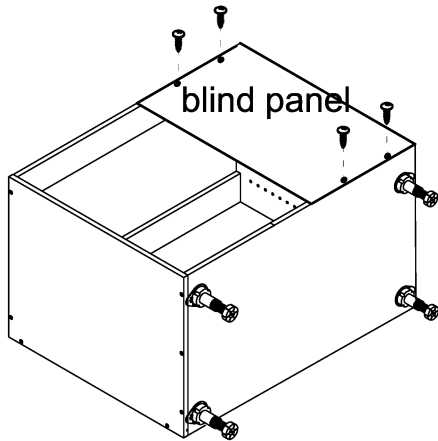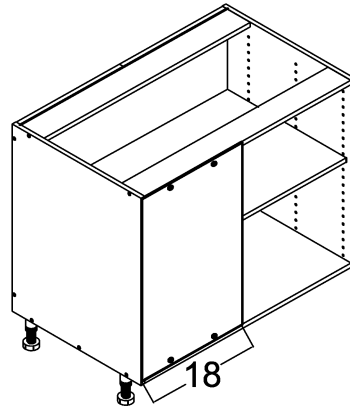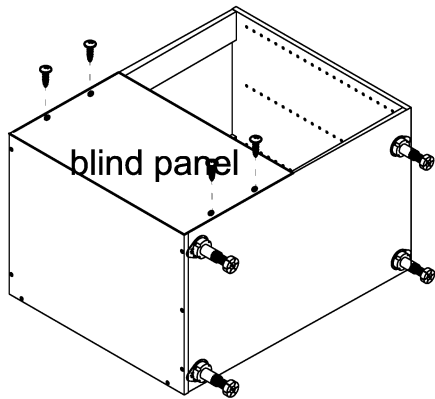

Microwave Base Cabinet

Microwave Base	Top Panel	Down Drawer
UB27	DM2719	DR2711
UB30	DM3019	DR3011

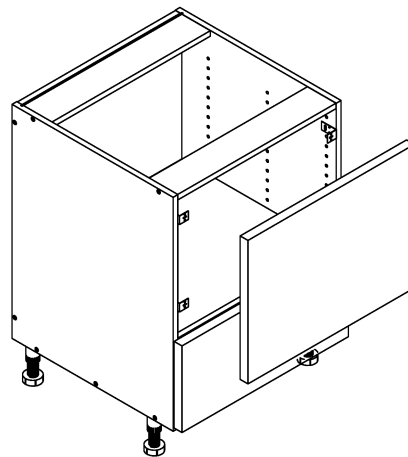 

1 Assembly
First, slide all the hinges, from the front, onto the mounting plates.

2 Then press lightly on each successive hinge until the arm latches onto the mounting plate with an audible click!

3 Disassembly
It is carried out in the opposite direction from bottom to top. The hinge is unlatched by pressing lightly on latch (1) which is hidden under the side arm.

4 In one movement, the hinge arm is lifted off the mounting plate (2) and the door is removed from the cabinet (3).

i Remove cover cap for hinge adjustment

Adjustment

- 1. Overlay adjustment: + 2 / - 2 mm**
Turn screw (A) clockwise: Door overlay decreases (-).
Turn screw (A) anticlockwise: Door overlay increases (+).
- 2. Depth adjustment: + 3 / - 2 mm**
Direct, infinitely variable depth adjustment by turning the screw (B).
- 3. Height adjustment: + 2 / - 2 mm**
Loosen fixing screws (C) slightly and adjust height of door. Then tighten fixingscrews again.

Technische Änderungen vorbehalten.
Keine Gewährleistung für Druckfehler
und Irrtümer.

Subject to technical alterations.
Errors and omissions excepted.

Sous réserve de modifications techniques.
Notre responsabilité ne sera engagée
en cas de fautes de frappe ou d'erreurs.

Salvo modifiche tecniche.
Nessuna garanzia per errori di stampa
ed errori.

 
Se reserva el derecho a realizar modificaciones técnicas. No ofrecemos
garantía alguna respecto a eventuales
erratas de impresión u otros errores.

Technische wijzigingen voorbehouden.
Wij zijn niet verantwoordelijk voor
drukfouten of andere vergissingen.

DRAWER BOX HEIGHT




K

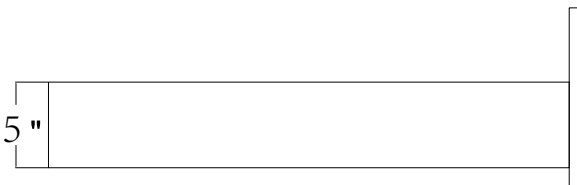

K










 
C




Drawer Box

        Assembly and adjustments

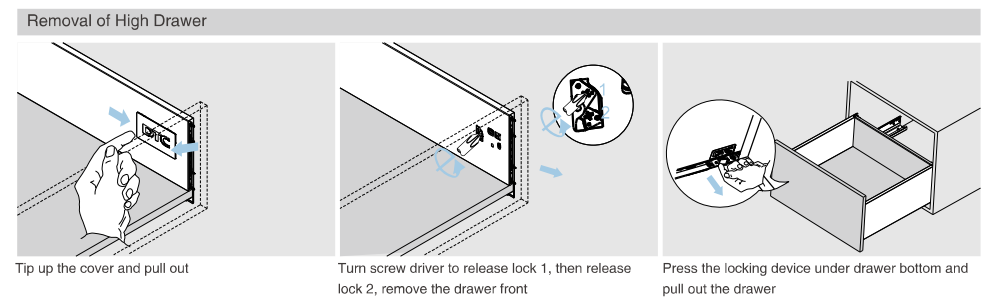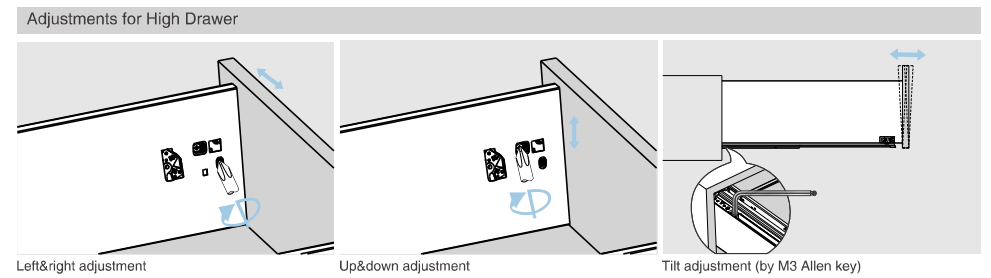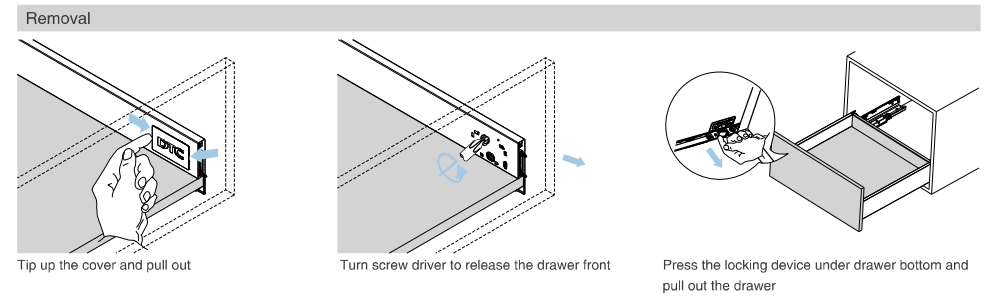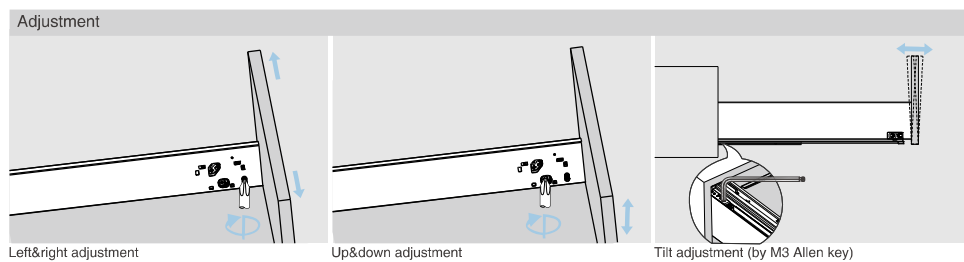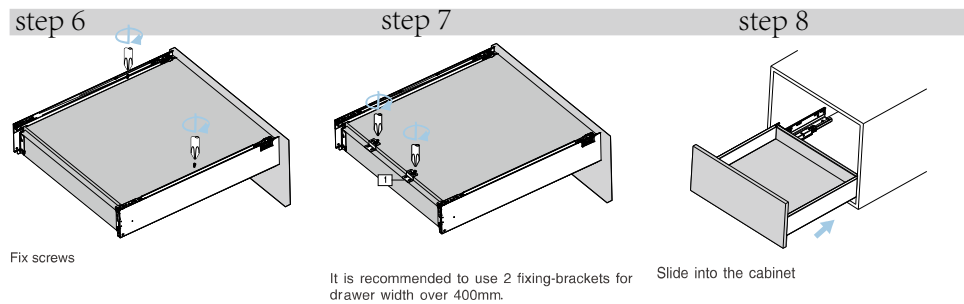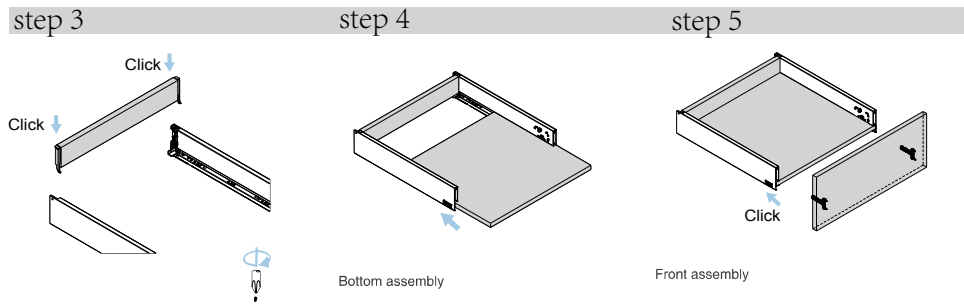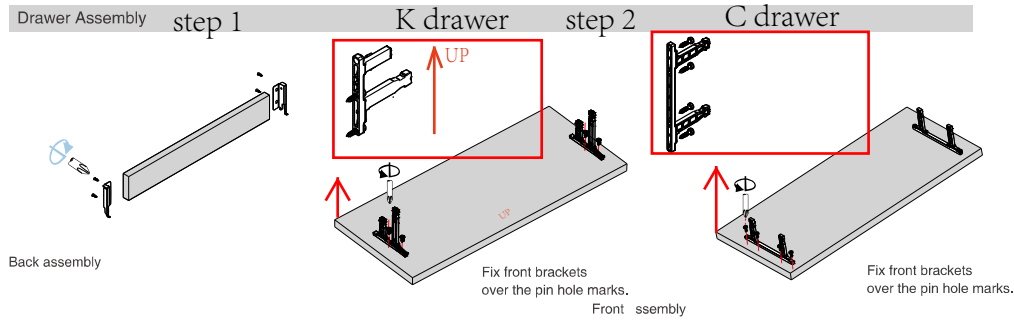


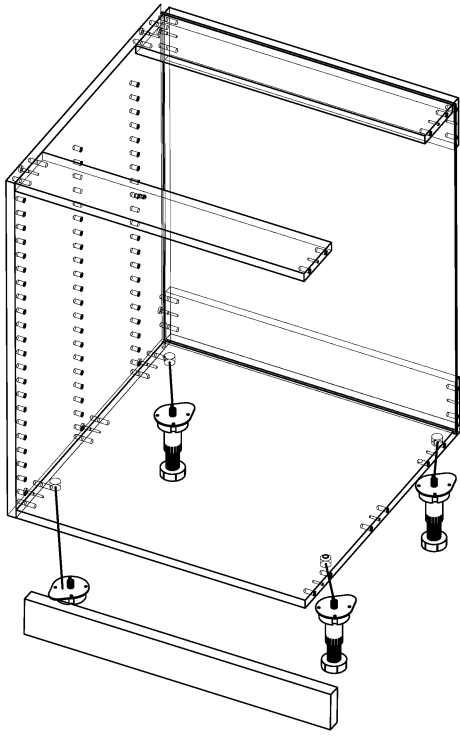

front

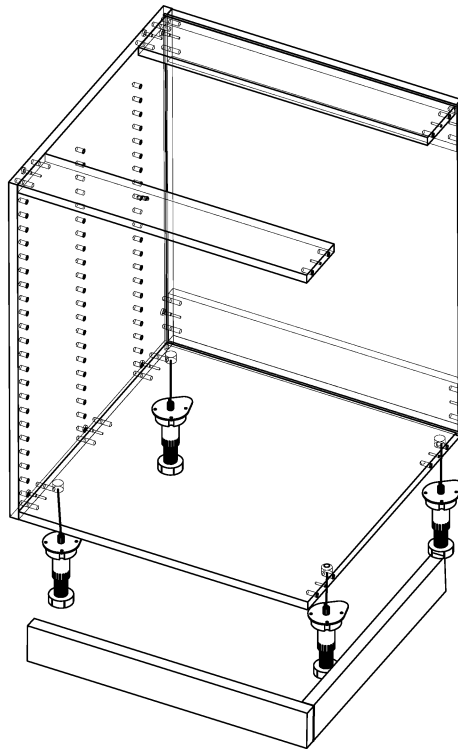 

front and right

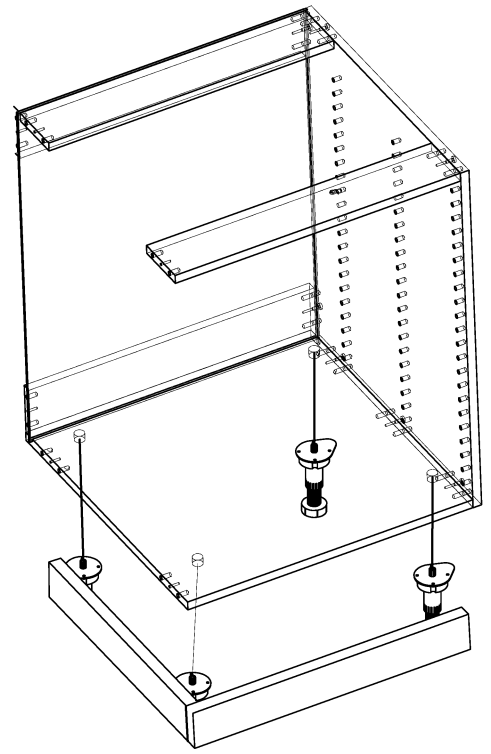 

front and left

LEGS AND TOEKICK

require screwing in, no
predrilled holes

